

Instruction Sheet

Spacer Wire- Used for Aligning Side Open Binders

Note: Not for use with top open binders.


To Remove Spacer Wire When Using Top Open Style Binders:

For Economy Models (without Back panel)

1. Under each shelf, remove 1/4" wing nuts and lock washers from Spacer Wire Screws
2. Remove Spacer Wire and store.

For Cabinet Models (with Back panel)

1. Remove wire organizer by grasping the area above each mounting post and applying forward and upward pressure until mounting post releases from shelf slot.
2. With the front released, pull the organizer forward and up to release the mounting posts at the back of the shelf.
3. Under each shelf, remove 1/4" wing nuts and lock washers from Spacer Wire Screws.
4. Remove Spacer Wire and store.
5. Reverse steps 1 and 2 to reinstall wire organizer to shelf.

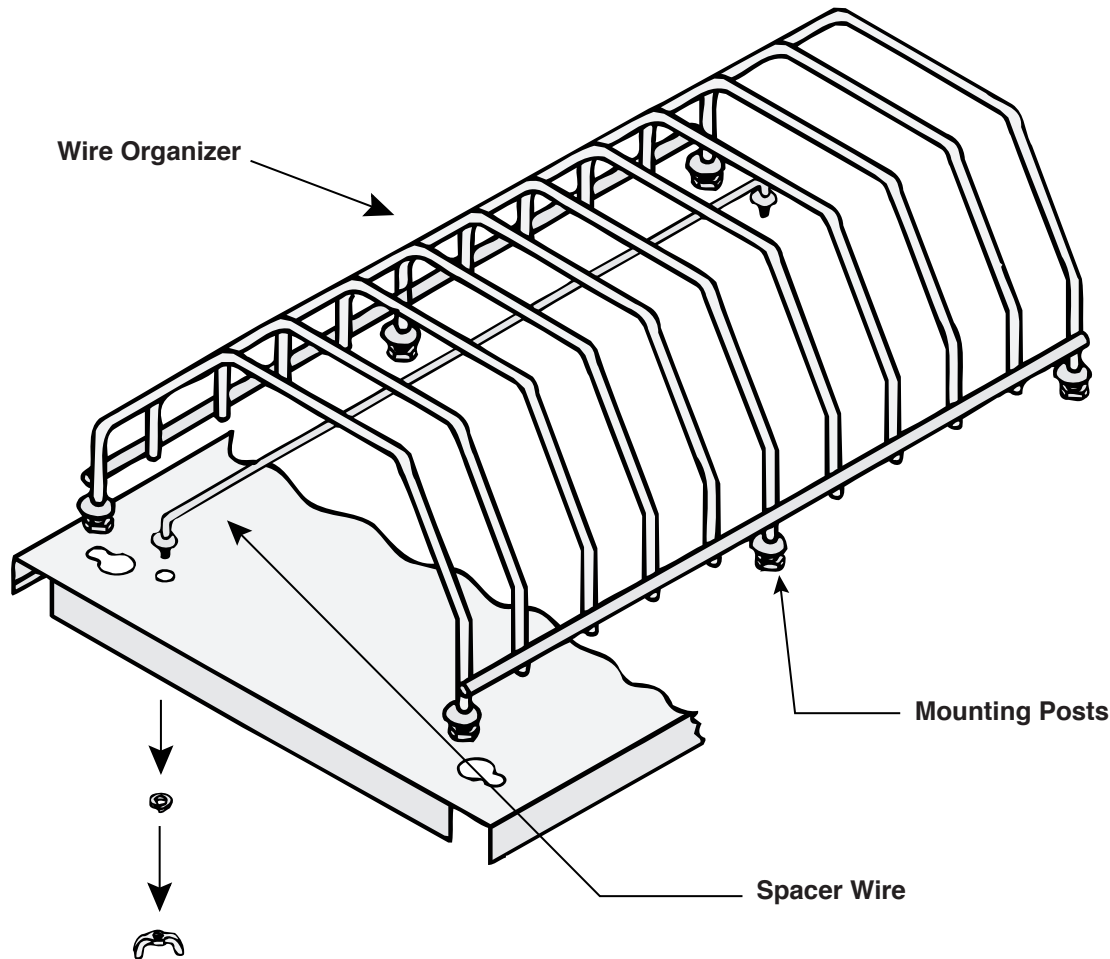

☒ 800 Glen Avenue, Moorestown, New Jersey 08057
☎ 1.800.257.BEAM (2326) • Local: 1.856.359.2231
☎ Fax: 1.856.359.2249 • E-mail: info@omnimedbeam.com

Visit our web page on the internet: www.omnimedbeam.com

Products to Help People...Help People